

Otari Remote Adapter Instructions

CB-127 Wireless Remote Adapter

Installation: Turn off the power to the tape deck. Plug the remote adapter into the Parallel I/O connector on the back of the tape deck. Now power can be turned back on. The light on the front of the remote adapter should be on.

The remote adapter can control up to 6 functions of the deck: Play, Stop, F.F., Rewind, Record and Lifter Defeat. The transport functions map to the appropriate buttons on the remote control. On the DirecTV remote the REC button must be double pressed to activate Record. Lifter Defeat is activated by pushing the #0 key on the keypad.

The remote adapter can be used with any universal remote programmed for the proper Sony VCR code. To select between them there are jumpers inside the unit. Remove the two screws on the bottom of the unit and remove the top cover. Located near the front window is a jumper block. Jumpers 1 & 2 configure what type of Sony VCR codes the unit will respond to. See the table below for a list of jumper settings and remote codes.

JMP1	JMP2	Device Code	DirectV	
JMP	JMP	Beta VCR	20033	*
JMP	OPEN	8mm VCR	20034	#
OPEN	JMP	VHS VCR	20032	
OPEN	OPEN	LDP	----	

* = Default jumper selection

- Not supported on DirecTV RC-66



Configuring the DirecTV Remote: To program the DirecTV remote first slide the switch at the top to AV1 or AV2. Press and hold the MUTE and SELECT buttons until the green light at the top blinks twice then release. Using the number keypad enter the 5 digit device code from the table above. If done correctly the green light will blink twice after the last digit is entered. Note: On the DirecTV remote the Record button must be double pressed to activate the function. The full manual for the DirecTV remote can be found here:

www.revoxremotes.com/Remotes/DirectV.htm

www.R2R-Remotes.com