

RCA

Universal Remote



1 TV



1 VCR



1 Cable Box

MENU
FUNCTIONS

REPLACES
3
REMOTES

Controls
Three
Devices

Menu
Functions

Replaces
Lost or
Broken
Remotes

Easy to
Hold &
Use

Extensive
Code
Library

Ensures
greater
compatibility.
See back for
brand list.



MULTI-BRAND USE

RCU300WB

Replace Three Remotes With One!

SETUP
INSTRUCTIONS
INSIDE

- Easy To Use
- Works 3 Components
Controls TV, VCR and Cable Box
- Menu Button
Operates major TV brands
including RCA, GE, ProScan, Sony,
Magnavox, Philips and Zenith
- Simple Set-up With
Code Search
Scans entire code library for the
right code for your TV, VCR, and
Cable Box
- Toll-Free Consumer Helpline
See the instruction book for details

Your RCA Universal Remote is compatible with most brands. (Of Infrared Remote Controlled Components Manufactured After 1990). Below is a partial list showing some of those brands, along with their corresponding popular set up codes for quick and easy reference. Check your owner's manual for a complete list.

Brand	TV	VCR	Cable	Brand	TV	VCR	Cable
ABC			001	Majestic	083		
Admiral	173	001		Marantz	004	021	
Adventura	174	026		Masushita		021	
Aiko	016	027		Megatron	006		
Aiwa		026		MEI		021	
Akai		008		Memorex	006	026	
Alleron	046			MGA	082	065	
AOC	006			Midland	181		
Archer			008	Mitsubishi	082	065	
Audiovox	038	014		Montgomery Ward	083	001	
Beaumarck		013		Motorola	173	021	
Belcor	004			Movie Time			027
Bell & Howell	001	011		MTC	105	013	
Broksonic		025		Multitech	038	026	
Cableview			008	NAD	071		
Candle	004	014		NEC	005	064	
Capehart		110		Nikko	006	014	
Carver		062		NSC			027
Celebrity	002			NTC	016		
Citizen	016	014	011	OAK			029
Colour Voice		012		Olympus		021	
Comtronics		015		Onwa	038		
Contec		016		Optimus	185	001	
Contec / Cony	038			Optonica	173	096	
Craig	038	013		Orion	035	031	
Crown	038			Panasonic	170	109	000
Curtis Mathes	171	022		Philco	062	022	
Daewoo	190	027		Phillips	062	062	011
Daytron	004	110		Pilot	004	014	
Eastern		017		Pioneer	185	123	034
Electrobrand	002			Portland	016	019	
Electrohome	004	014		ProScan	000	000	
Emerson	191	031		Proton	004		
Envision	004			Pulsar	151	104	
Fisher	048	011		Quasar	070	021	
Fujitsu	046			Radio Shack	038	026	
Funai	038	026		RCA	000	089	000
Futuretec	038			Realistic	004	026	009
Garrard		026	011	Regal			022
GC Electronics			009	Runco		104	
GE	100	115		Samsung	105	013	034
Gemini			018	Sansui		010	
General Instruments			003	Sanyo	048	011	
Gibraltar	004			Scientific Atlanta			006
Goldstar	004	014		Scott	035	065	
Gradiente		026		Sears	181	014	
Hallmark	006			Sharp	173	001	
Hamlin			020	Shoqun	004	013	
Harley Davidson		026		Signature	001		003
Harvard	038			Simpson	008		
Hi-Q		023		Sony	218	099	
Hitachi	059	055	003	Soundesign	004		
Infinity	062			Sylvania	062	022	
Jasco			011	Symphonic	189	026	
JBL	062			Tandy	173		
JC Penney	181	014		Tatung	003	111	
JCB	002			Teac		026	
JCL		021		Technics	054	109	
Jensen		055		Teknika	016	021	
Jerrold			046	TMK		013	
JVC	159	011		Tocom			004
Kenwood	006	009		Toshiba	109	015	
KLH		061		Totevision	171	014	
Kloss Novabeam	068			Universal	087		011
KTV	038			Vector Research		009	
Logik	083	061		Victor	182		
Luxman	006			Viking	174		
LXI	062	014		Wards	062	026	
Magnavox	062	062	025	Yamaha	004	009	
Magnin		013		Zenith	152	104	050

DATE CODE
5127P



Includes 2 AAA Batteries

© 2001 Thomson multimedia Inc.

Product Exchange Center

11721 Alameda Ave.

Socorro, TX 79927

Made In Indonesia

PRCU300WB Rev0301


Trademark(s) © Registered Marca(s) Registrada(s)

www.rca.com

RCU300WB

Table Of Contents

 Button Description.....	2-3
Battery Installation	3
Programming Your Universal Remote	
TV	4
TV Codes	4-5
VCR.....	6
VCR Codes.....	6-7
Cable Box.....	8
Cable Box Codes.....	9
Programming With Code Search	9
Retrieval Codes	10
TV Menu.....	11
Trouble Shooting.....	12
Help Line	12

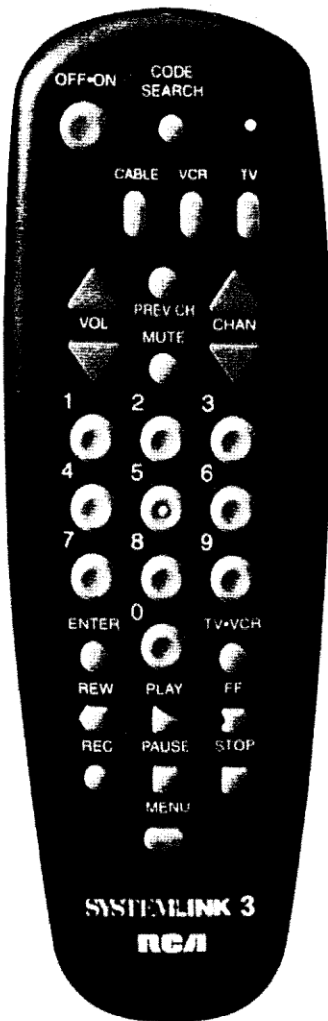

Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

OFF/ON

The OFF/ON button operates the same as your original remote. Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the OFF/ON button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

CABLE, VCR, TV

The CABLE, VCR, and TV buttons are used to select the device you want to control.

REW, PLAY, FF, REC, PAUSE, STOP

The REW, PLAY, FF, REC, PAUSE, and STOP buttons operate the same as on your original VCR remote. You must press the RECORD button twice to begin recording.

TV/VCR

The TV/VCR button operates the TV/VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

MENU

The MENU button calls up the TV set up menu.

Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. Remove the battery compartment cover.



2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3. Press and push the battery cover back into place.

 
Note: Reprogramming may be required after batteries are removed.

Programming For TV


1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



 
3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.



 After your code is entered, the **INDICATOR LIGHT** will turn off.



5. Aim the remote at your TV and press the **OFF/ON** button. Your TV should turn off.

OFF/ON



 
Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your TV on, press **CHAN+**. If the TV responds, no further programming is required.



CHAN

7. Enter your code here for easy reference.

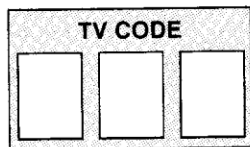

TV Code List

Abex	172	CXC	038
Admiral	001, 173	Daewoo	016, 190, 005
Advertura	174	171, 004, 006, 017, 127
Aiko	016	Daytron	004, 006, 171
Akai	002	Dimensia	000
Alleron	046	Dumont	004, 151
Amtron	038	Dynatech	004
Anam National	003, 038	Electroband	002
AOC	006, 005, 004, 007	Electrohome	004, 006, 002, 003
Audiovox	038	019, 022
Belcor	004	Emerson	030, 171, 191, 004
Bell & Howell	001, 083, 162	038, 046, 006, 012, 023, 024, 025	
Bradford	038	026, 027, 028, 029, 031, 032, 033	
Brokwood	004	034, 035, 036, 037, 039, 041, 042	
Candle	004, 006, 008, 174	043, 044, 047, 123, 124, 162, 177	
Celebrity	002	179
Citizen	016, 171, 004, 006, 008	Envision	004, 006
.....	038, 105, 174, 177	Fisher	048, 049, 051, 162, 180
Colortyme	004, 006	Fujitsu	046
Concerto	004, 006	Funai	038, 046
Contec / Cony	012, 013, 038	Futuretec	038
Craig	038	GE	000, 054, 003, 004, 006
Crown	038, 171	022, 052, 055, 087, 164, 165
Curtis Mathes	171, 000, 004	166, 167, 168, 181
.....	006, 015, 105, 162	Gibraltar	004, 151

TV Code List Continued


Goldstar	005, 156, 004, 006	Runco	151
.....	172, 012, 019, 056, 057, 058	Sampo	004, 006, 171, 172
.....	155, 171	Samsung	171, 004, 005, 105
Grundig	171, 038, 046	006, 012, 015, 017, 019, 104
Hallmark	004, 006	106, 172
Harvard	038	Sansui	191
Hitachi	059, 004, 148, 006, 012	Sanyo	048, 080, 004, 180, 162
.....	013, 060, 061, 135, 136, 137	169, 049
.....	138, 139, 140, 141, 142, 143	Scotch	006
.....	144, 145, 146, 150, 179	Scott	004, 038, 046, 006, 012
IMA	038	024, 035
Infinity	062	Sears	000, 048, 189, 004, 046
Janeil	174	006, 013, 019, 049, 051, 066
JBL	062	072, 109, 110, 162, 180, 181
JCB	002	Sharp	173, 095, 171, 004, 006
JC Penny	000, 054, 005, 171	012, 029, 111, 112, 113, 122
004, 052, 006, 172, 008, 020, 058		Shogun	004
.....	063, 064, 072, 087, 105, 181	Signature	001, 083
Jensen	004, 006	Simpson	008
JVC	159, 013, 012, 182, 054	Sony	002, 218
060, 065, 066, 067, 123, 157, 158		Soundesign	004, 038, 046, 006
Kawasho	002, 004, 006	008
Kenwood	004, 006, 019	Squareview	189
Kloss Novabeam	068, 069, 174	SSS	004, 038
.....	183	Starlite	038
KTV	171, 038, 177, 070	Supre-Macy	174
Loewe	062	Supreme	002
Logik	083	Sylvania	062, 004, 006, 088
Luxman	004, 006	076, 116, 008, 019, 068, 069
LXI	000, 062, 006, 073, 162	075, 077, 161, 183
.....	181, 049, 072	Symphonic	038, 189, 033
Magnavox	062, 004, 006, 130	Tandy	173
.....	134, 183, 008, 019, 068, 069	Tatung	003
.....	075, 076, 077, 088, 131, 132	Technics	054
.....	133, 219, 235	Techwood	004, 006, 054
Majestic	083	Teknika	016, 005, 171, 004
Marantz	004, 006, 062	006, 008, 012, 013, 038, 046
Megatron	006, 059	076, 082, 083, 105, 170
Memorex	083, 006, 001	Tera	004, 012, 093
.....	082, 162	TMK	004, 006
MGA	005, 004, 006	Toshiba	105, 162, 160, 161
.....	079, 082, 019, 022, 051, 080	049, 072, 109, 118
Midland	054, 151, 171	Totevision	171
.....	172, 181	Universal	052, 087
Minutz	052	Victor	068, 182
Mitsubishi	005, 004, 006	Vidtech	004, 005, 006
.....	125, 082, 081, 019, 022, 051	Viking	174
.....	079, 080, 135	Wards	000, 062, 095, 005
Montgomery Ward	083	004, 046, 052, 006, 083, 001
Motorola	003, 173	019, 024, 033, 068, 069, 070
MTC	005, 004, 105, 006	076, 087, 088, 119, 120
Multitech	038	Yamaha	004, 005, 006, 019
NAD	006, 185, 072	Zenith	051, 083, 004, 152
NEC	005, 004, 006, 003	151, 153, 154, 217
Nikko	006, 016		
NTC	016		
Onwa	038		
Optimus	185		
Optonica	095, 173		
Orion	191, 035		
Panasonic	170, 054, 062, 003		
Philco	062, 005, 004, 006, 183		
.....	008, 012, 019, 003, 068, 069		
.....	075, 077		
Philips	062, 004, 075, 008, 019		
.....	003, 012, 068, 069, 076, 086		
.....	087, 088		
Pilot	004, 171		
Pioneer	004, 006		
.....	090, 091, 092, 136, 179, 185		
Portland	016, 005, 171		
.....	004, 006		
Price Club	105		
Prism	054		
Proscan	000, 181		
Proton	004, 006, 012, 093		
Pulsar	151		
Pulser	004		
Quasar	003, 054, 070		
Radio Shack / Realistic	000		
.....	095, 171, 004, 038, 006, 012		
.....	049, 162		
RCA	000, 100, 005, 003, 004		
.....	006, 007, 019, 096, 098, 099		
.....	101, 102, 103, 129, 179, 181		
.....	188, 190, 203, 233		

Programming For VCR


1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



 
3. Press and release the **VCR** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.



 After your code is entered, the **INDICATOR LIGHT** will turn off.



5. Aim the remote at your VCR and press the **OFF/ON** button. Your VCR should turn off.

 


Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your VCR on, press **CHAN+**. If the VCR responds, no further programming is required.



7. Enter your code here for easy reference.

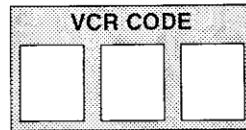

VCR Code List Continued

Garrard	026	Radix	014
GE	000, 022, 013, 115	Randex	014
.....	053, 021, 120	Ricoh	128
Goldstar	014, 018, 054, 009	Runco	104
Grandiente	026	Samsung	013, 015, 112, 053
Harley Davidson	026	055, 033
Harman Kardon	009	Sanky	001, 104
Harwood	061	Sansui	010, 092, 111, 123
Headquarter	011	Sanyo	011, 013, 023
Hitachi	055, 120, 056, 057	Scott	025, 065, 015, 012
.....	107, 111	032, 038, 116
HI-Q	023	Sears	014, 055, 011, 023
Instant Replay	021	118, 021, 028, 048
JCL	021	049, 050, 051, 056, 107
JC Penny	014, 011, 022, 013	Sharp	001, 095, 017, 029
.....	009, 118, 060, 107	094, 096, 097
.....	010, 021	Shintom	056, 061, 098
Jensen	055, 056, 111	Shogun	013
JVC	009, 010, 011, 018	Signature	001
.....	111, 123	Singer	021, 061, 128
Kenwood	009, 010, 123, 111	Sony	099, 119, 098
.....	011, 016, 018	STS	021, 107
KLH	061	Sylvania	022, 062, 026, 065
Kodak	014, 021	021, 063, 065, 124
Lloyd	026	Symphonic	026
Logik	061	Tandy	011
LXI	014	Tashiko	014
Magnavox	022, 062, 104, 063	Tatung	111
.....	021, 108, 124	Teac	026, 085, 111
Magnin	013	Technics	021, 109
Marantz	062, 011, 010, 016	Teknika	026, 022, 014, 129
.....	009, 018, 021, 022, 064	021, 100
Marta	014	TMK	013, 024, 047
Masushita	021	Toshiba	015, 055, 049, 051
MEI	021	065, 116
Memorex	026, 014, 104, 001	Totevision	013, 014
.....	011, 013, 021, 022, 023	Unitech	013
MGA	029, 065, 113	Vector Research	009, 010
MGN Tech.	013	015, 016
Midland	053	Victor	010
Minolta	055, 056, 107	Video Concepts	009, 010
Mitsubishi	065, 055, 072, 029	015, 016, 113
.....	056, 066, 067, 068	Videasonic	013
.....	069, 070, 071, 073	Wards	026, 022, 013, 055
.....	074, 106, 113, 123	001, 061, 014, 015
Montgomery Ward	001, 075	021, 023, 029, 056
Motorola	001, 021	096, 101, 102, 103
MTC	013, 026	107, 116
Multitech	013, 016, 026	XR-1000	021, 026, 061
.....	053, 061	Yamaha	009, 010, 011
NEC	064, 076, 011, 010	018, 111
.....	079, 009, 018, 078	Zenith	104, 119, 098, 128
.....	111, 123		
Nikko	014		
Noblex	013		
Olympus	021		
Orion	031		
Optimus	001, 014		
Optonica	096		
Panasonic	109, 021, 022, 125		
.....	126, 127		
Pentax	016, 055, 056		
.....	107, 120		
Pentax Research	018		
Philco	022, 062, 063, 021		
Philips	062, 096, 022		
.....	021, 124		
Pilot	014		
Pioneer	055, 010, 080		
.....	081, 123		
Portland	016, 017, 019, 110		
ProScan	000		
Protec	061		
Pulsar	104		
Quarter	011		
Quartz	011		
Quasar	021, 022, 125		
RCA	089, 000, 055, 022		
.....	091, 003, 013, 021		
.....	056, 082, 083, 084		
.....	085, 086, 087, 088		
.....	090, 107, 115, 120, 125		
Radio Shack / Realistic	022		
.....	014, 001, 011, 013		
.....	023, 021, 026, 029		
.....	049, 050, 096		

VCR Code List


Admiral	001	Craig	013, 014, 023, 061
Adventura	026	Curtis-Mathes	022, 013, 115
Aiko	027	024, 000, 009, 016, 018, 021
Aiwa	026	Cybernex	013
Akai	008, 113, 112, 003	Daewoo	027, 025, 015, 017
.....	005, 007, 111	019, 026, 028, 110
American High	021	Daytron	110
Asha	013	DBX	009, 010
Audio Dynamics	009, 010	Dimensia	000
Audiovox	014	Dynatech	026
Bell & Howell	011	Electrohome	014, 029
Beaumarck	013	Electrohome	014
Broksonic	031, 025, 012	Emerson	014, 025, 026, 065
Calix	014	041, 015, 012, 021
Candle	014, 013, 015, 018	024, 029, 030, 031
.....	016, 017, 019	032, 033, 034, 036
Canon	021, 022	037, 038, 039, 040
Capehart	020, 110	042, 044, 045, 046
Carver	062	047, 105, 113, 116
CCE	027, 061	117, 130
Citizen	014, 013, 027, 015	Fisher	011, 023, 052, 048
.....	016, 017, 018, 019	049, 050, 051, 118
Colortyme	009	Fuji	021, 119
Colt	061	Funai	026

Programming For Cable Box


1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



 3. Press and release the **CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.

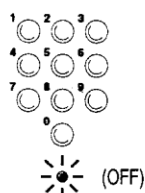

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **OFF/ON** button. Your Cable Box should turn off.

 


Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your Cable Box on, press **CHAN+**. If the Cable Box responds, no further programming is required.



7. Enter your code here for easy reference.

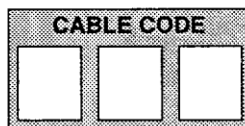

Cable Box Code List


ABC	001, 003, 004	Philips	011, 012, 013, 019
.....	005, 006, 007	025, 030, 031, 032
Antronix	008, 009	Pioneer	034, 033
Archer.....	008, 009, 010, 011	RCA.....	000, 047, 049
Cabletenna	008	Realistic.....	009
Cableview	008	Regal.....	022, 035
Century.....	011	Regency.....	017
Citizen.....	011	Rembrandt	003
Colour Voice.....	012, 013	Samsung	034
Comtronics	015	Scientific Atlanta.....	006, 036
Contec	016	037, 038
Eastern	017	Signal	018
Garrard.....	011	Signature	003
GC Electronics	009	Sprucer.....	000
Gemini	018, 019	Standard Component.....	039
General Instru	049, 001, 003	Starcom	001, 007, 018
Hamlin	035	Stargate	018
Hitachi	003	Starquest	018
Jasco	011	Tocom.....	004, 023
Jerrold	049, 001, 003, 005	Tusa	018
.....	007, 018, 023, 024, 046	TV86.....	027
Magnavox	025	Unika	008, 009, 011
Movie Time.....	027, 028	United Cable.....	001
NSC	027, 028	Universal	008, 009, 010, 011
OAK	029, 016	View Star	015, 016, 025, 027
Panasonic.....	000, 048	Zenith	050, 051

Programming With Code Search


If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Turn on the device you wish to program.

 2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



 3. Press and release the device button for the device you are programming (**TV, VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

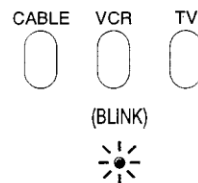

4. Press and release **OFF/ON** until your device turns off.



Important: You may have to press **OFF/ON** up to 200 times.

 
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.




Retrieving Codes

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.


1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



 
2. Press and release the device button for the device's code you are retrieving (**TV**, **VCR**, or **CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

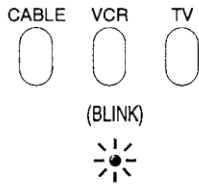

 3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.



 4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.

6. Repeat step 4 until you have retrieved all three numbers in the code.

Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

 
Entering the TV Menu Mode:

1. Push the **TV** button on the remote.



2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.



While in **TV MENU** these buttons will function as follows:

VOL UP/DOWN buttons will operate as **CURSOR RIGHT/LEFT**.

CHAN+/- keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan TVs pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.



Note: Not all functions in competitive models and brands of televisions may be fully supported.

Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.



Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.

2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.

3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.

Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method (page 9).
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed (See page 3).

Note: Reprogramming may be required after batteries are removed.

Help Line

If you need additional set-up help
please call the Help Line at:
1-800-269-9143