

MANUFACTURER'S CODES

Setup Codes for Cable Boxes

Americast	0899	Philips	0305, 0317
Bell South	0899	Pioneer	0877, 1877, 0144, 0533
Director	0476	Pulsar	0000
General Instrument	0476, 0810, 0276	Quasar	0000
GoldStar	0144	Runco	0000
Hamlin	0009	Samsung	0144
Jerrold	0476, 0810, 0276	Scientific Atlanta	0877, 1877, 0477
Memorex	0000	Sony	1006
Motorola	0476, 0810, 0276	Supercable	0276
Pace	0237	Toshiba	0000
Panasonic	0000, 0107	Zenith	0000, 0525, 0899
Paragon	0000		

Setup Codes for Cable Box/PVR (or DVR) Combos

Motorola	1376	Scientific Atlanta	1877
Pioneer	1877		

Setup Codes for DVD Players

Apex Digital	0672, 0717, 0794, 1056, 0755, 0797, 1100, 0796, 1061	Mintek	0839, 0717
Axion	1072	Mitsubishi	0521, 1521
Blaupunkt	0717	Nesa	0717
Blue Parade	0571	Norcent	1003
CineVision	0876	Onkyo	0503
Curtis Mathes	1087	Oritron	0651
CyberHome	1024, 1023, 0816	Panasonic	0490, 1762
Daewoo	0784	Philips	0503, 0539, 0646
Denon	0490	Pioneer	0525, 0571
Dual	1068	Polk Audio	0539
DVD2000	0521	Proscan	0522
Emerson	0591, 0675	Qwestar	0651
Enterprise	0591	RCA	0522, 0571, 0717
Fisher	0670	Rotel	0623
Funai	0675	Rowa	0823
GE	0522, 0815, 0717	Samsung	0573, 1075, 0820
Go Video	0744, 0715, 0783	Sanyo	0670
GPX	0699	Shinsonic	0533, 0839
Greenhill	0717	Sony	0533, 1533, 0864, 1033
Hitachi	0573	Sylvania	0675
Hiteker	0672	Symphonic	0675
JVC	0558, 0623	Technics	0490
Kenwood	0490, 0534	Theta Digital	0571
KLH	0717, 1020	Toshiba	0503
Koss	0651	Tredex	0799
Lasonic	0798	Urban Concepts	0503
Magnavox	0503, 0675	Xbox	0522
Marantz	0539	Yamaha	0490, 0539, 0545
Microsoft	0522	Zenith	0503, 0591

Setup Codes For DVD Player/VCR Combos

Apex Digital	1061	Sanyo	0104
Go Video	0744, 0715	Sony	0864
Hitachi	0000	Sylvania	0675, 0000
Panasonic	1762	Symphonic	0675, 0000
RCA	0060	Toshiba	0503
Samsung	1075, 0820		

continued on next page...

MANUFACTURER'S CODES

Setup Codes for PVRs (or DVRs)

Panasonic	0616	Sonic Blue	0616, 0614
Philips	0618	Sony	0636
ReplayTV	0614, 0616	Tivo	0636, 0618

Setup Codes for Satellite Receivers

AlphaStar	0772	Mitsubishi	0749
DirecTV	0392, 0566, 0639, 0247, 0749, 1749, 0724, 0819, 1856	Motorola	0869
Dish Network System	1005, 0775	Next Level	0869
Dishpro	1005, 0775	Panasonic	0247, 0701
Echostar	1005, 0775	Paysat	0724
Expressvu	0775	Philips	0749, 1749, 0724, 0722
GE	0566	Proscan	0392, 0566
General Instrument	0869	RadioShack	0869
GOI	0775	RCA	0392, 0566, 0855, 0143
Hitachi	0819	Samsung	1276
HTS	0775	SKY	0856
Hughes Network Systems	0749, 1749	Sony	0639, 1639
JVC	0775	Star Choice	0869
Magnavox	0724, 0722	Toshiba	0749, 1749, 0790, 1285
Memorex	0724	UltimateTV	0392, 0639
		Uniden	0724, 0722
		Zenith	0856, 1856

Setup Codes for Satellite Receiver/PVR (or DVR) Combos

Echostar	1005	RCA	0392
Expressvu	0775	Sony	0639
Proscan	0392		

Setup Codes for TVs

AOC	0030	Crown Mustang	0672
Admiral	0093, 0463	Curtis Mathes	0047, 0054, 0154, 0451, 0093, 0060, 0702, 0030, 0145, 0166, 1147, 1347
Advnt	0761, 0842		
Aiko	0092	Daewoo	0451, 1661, 0092, 0672, 0623
Alkai	0702, 0030, 0672, 0812	Denon	0145
Alfide	0672	Dumont	0017
America Action	0180	Durabrand	0178, 0180
Anam	0180	Electroband	0000
Apex Digital	0748, 0765, 0767	Emerson	0154, 0236, 0463, 0180, 0178, 0171, 0623
Audiovox	0451, 0180, 0092, 0623	Envision	0030
Baysonic	0180	Fisher	0154
Bell & Howell	0154	Fujitsu	0683, 0809
Bradford	0180	Funai	0180, 0171
Broksonic	0236, 0463	Futuretech	0180
CXC	0180	GE	0047, 0051, 0451, 0178, 1147, 1347
Candle	0030	Gateway	1755, 1756
Carnivale	0030	Gibraltar	0017, 0030
Carver	0054	GoldStar	0030, 0178
Celebrity	0000	Gradiente	0053
Celera	0765	Grundig	0672
Changhong	0765	Grunpy	0180
Cineral	0451, 0092	Hallmark	0178
Citizen	0060, 0030, 0092	Harman/Kardon	0054
Clarion	0180	Harvard	0180
Contec	0180	Havermy	0093
Craig	0180	Hello Kitty	0451
Crosley	0054		
Crown	0180, 0672		

Hitachi	0145, 1145
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0463, 0053
Jensen	0761
KEC	0180
KLH	0765, 0767
KTV	0180, 0030
Kenwood	0030
Kioto	0706
LXI	0047, 0054, 0154, 0156, 0178
MGA	0150, 0030, 0178
MTC	0060, 0030
Magnavox	0054, 0706, 0030, 1454, 1254
Marantz	0054, 0030
Matsushita	0250, 0650
Megatron	0178, 0145
Memorex	0154, 0250, 0463, 0150, 0178
Midland	0047, 0017, 0051
Mitsubishi	0093, 0150, 1250, 0178, 0836
Motorola	0093
Multitech	0180
NAD	0156, 0178, 0866
NEC	0030, 1704, 0704
NTC	0092
Nikko	0030, 0178, 0092
Norcent	0748, 0824
Onwa	0180
Optimus	0154, 0250, 0166, 0650
Optonica	0093
Orion	0236, 0463
Panasonic	0051, 0250, 0650
Penney	0047, 0156, 0051, 0060, 0030, 0178, 1347
Philco	0054, 1661, 0463, 0030, 0145
Philips	0054, 1454, 0690
Pilot	0030
Pioneer	0166, 0866
Portland	0092
Prima	0761
Prism	0051
Proscan	0047
Proton	0178
Pulsar	0017
Quasar	0051, 0250, 0650

RCA	0047, 1047, 1147, 1247, 1347, 1447, 1547
RadioShack	0047, 0154, 0180, 0030, 0178
Realistic	0154, 0180, 0030, 0178
Runco	0017, 0030
SSS	0180
Sampo	0030, 1755
Samsung	0060, 0702, 0030, 0178, 0812
Sansei	0451
Sansui	0463
Sanyo	0154
Scotch	0178
Scott	0236, 0180, 0178
Sears	0047, 0054, 0154, 0156, 0178, 0171
Semivox	0180
Semp	0156
Sharp	0093
Sheng Chia	0093
Sony	0000, 1100, 0810
Soundesign	0180, 0178
Squareview	0171
Starlite	0180
Supreme	0000
Sylvania	0054, 0030, 0171
Symphonic	0180, 0171
TMK	0178
TNCi	0017
TVS	0463
Tandy	0093
Technics	0051, 0250
Techwood	0051
Teknika	0054, 0180, 0150, 0060, 0092
Telefunken	0702
Toshiba	0154, 0156, 0060, 1356, 1656, 1704, 0650
Toshiba	1256
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178
ViewSonic	1755
Wards	0054, 0030, 0178, 0866
Waycon	0156
White Westinghouse	0463, 0623
Yamaha	0030
Zenith	0017, 0463, 0178, 0092

Setup Codes For TV/DVD Player Combos

Sylvania	0675
----------	------

Setup Codes For TV/VCR Combos

America Action	0278
Audiovox	0278
Broksonic	0479, 1479
Citizen	1278
Colt	0072
Curtis Mathes	1035
Daewoo	1278
Emerson	0479, 1479, 1278
Funai	0000
GE	0240, 1035, 0807, 1060

GoldStar	1237
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	1278
Magnavox	0000, 1781
Magnin	0240
Memorex	0162, 1237

continued on next page...

MANUFACTURER'S CODES

Setup Codes For TV/VCR Combos, continued

MGA	0240	Sansui	0000, 1479, 0479
Mitsubishi	0807	Sanyo	0240
Optimus	0162	Sears	0000, 1237
Orion	1479, 0479	Sony	0000, 1232
Panasonic	0162, 1035	Sylvania	1781
Penney	0240, 1035, 1237	Symphonic	0000
Quasar	0162, 1035	Thomas	0000
RadioShack	0000	Toshiba	1145, 0845
RCA	0240, 0807, 1060, 1035	Zenith	0000, 1479, 0479
Samsung	1014		

Setup Codes For TV/VCR/DVD Player Combos

Sharp	0807
-------	------

Setup Codes For VCRs

ABS	1972	Harley Davidson	0000
Admiral	0048, 0209	Harman/Kardon	0081, 0038
Adventura	0000	Harwood	0072
Aiko	0278	Hewlett Packard	1972
Aiwa	0037, 0000	HI-Q	0047
Akai	0041	Hitachi	0000, 0042, 0041
Alienware	1972	Hughes Network Systems	0042
America Action	0278	iBUYPOWER	1972
American High	0035	Jensen	0041
Asha	0240	JVC	0067, 0041
Audiovox	0037, 0278	KFC	0037, 0278
Beaumont	0240	Kenwood	0067, 0041, 0038
Bell & Howell	0104	KLH	0072
Broksonic	0184, 0121, 0209, 1479, 0479	Kodak	0035, 0037
Calix	0037	Lloyd's	0000
Canon	0035	Logik	0072
Carver	0081	LXI	0037
CCE	0072, 0278	Magnasonic	1278
Citizen	0037, 0278, 1278	Magnavox	0035, 0039, 0081, 0000, 1781
Colt	0072	Magnin	0240
Craig	0037, 0047, 0240, 0072	Marantz	0035, 0081
Curtis Mathes	0060, 0035, 0162, 0041, 1035	Marta	0037
Cybernex	0240	Matsushita	0035, 0162
CyberPower	1972	Media Center PC	1972
Daewoo	0045, 0278, 1278	MEI	0035
Denon	0042	Memorex	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0479, 1237
Durabrand	0038, 0039	MGA	0240, 0043
Dynatech	0000	MGN Technology	0240
Electrohome	0037	Microsoft	1972
Electrohome	0037	Mind	1972
Emerex	0032	Mimolta	0042
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0278, 0479, 1479, 1278	Mitsubishi	0067, 0043, 0807
Fisher	0047, 0104	Motorola	0035, 0048
Fuji	0035, 0033	MTC	0240, 0000
Funai	0000	Multitech	0000, 0072
Garrard	0000	NEC	0104, 0067, 0041, 0038
Gateway	1972	Nikko	0037
GE	0060, 0035, 0240, 0807, 1060, 1035	Noblex	0240
Go Video	0432	Northgate	1972
GoldStar	0037, 0038, 1237	Olympus	0035
Gradiente	0000		

Optimus	1062, 0162, 0037, 0048, 0104, 0432	Shogun	0240
Orion	0184, 0209, 1479, 0479	Singer	0072
Panasonic	1062, 0035, 0162, 1035, 0616	Sonic Blue	0614, 0616
Penney	0035, 0037, 0240, 0042, 0038, 1035, 1237	Sony	0035, 0032, 0033, 0000, 1232, 0636
Pentax	0042	STS	0042
Philco	0035	Sylvania	0035, 0081, 0000, 0043, 1781
Philips	0035, 0081, 0618	Symphonic	0000
Pilot	0037	Tagar Systems	1972
Pioneer	0067	Tatung	0041
Polk Audio	0081	Teac	0000, 0041
Profitronic	0240	Technics	0035, 0162
Proscan	0060, 1060	Teknika	0035, 0037, 0000
Protec	0072	Thomas	0000
Pulsar	0039	Tivo	0636, 0618
Quasar	0035, 0162, 1035	TMK	0240
RadioShack	0000	Toshiba	0045, 0043, 1145, 0845
Radix	0037	Totevision	0037, 0240
Randex	0037	Touch	1972
RCA	0060, 0240, 0042, 1035, 0880, 0807, 1060	Unitech	0240
Realistic	0035, 0037, 0048, 0047, 0000, 0104	Vector	0045
ReplayTV	0616, 0614	Vector Research	0038
Runco	0039	Video Concepts	0045
Samsung	0240, 0045, 1014	Videomagic	0037
Sanky	0048, 0039	Videosonic	0240
Sansui	0000, 0067, 0209, 0041, 1479, 0479	Viewsonic	1972
Sanyo	0047, 0240, 0104	Villain	0000
Scott	0184, 0045, 0121, 0043	Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072
Sears	0035, 0037, 0047, 0000, 0042, 0104, 1237	White Westinghouse	0209, 0072
Sharp	0048, 0807	XR-1000	0035, 0000, 0072
Shintom	0072	Yamaha	0038
		Zenith	0039, 0033, 0000, 0209, 1479, 0479
		ZT Group	1972