

Tascam Remote Adapter Instructions

RC-71 Wireless Remote Adapter


Installation: Turn off the power to the tape deck. Plug the remote adapter into the remote connector on the back of the tape deck. Now power can be turned back on. The light on the front of the remote adapter should be on.

The remote adapter can control up to 6 functions of the deck: Play, Stop, F.F., Rewind, Record and Pause. The transport functions map to the appropriate buttons on the remote control. On the DirecTV remote REC must be double pressed before Record is activated on the deck. To initiate Record, double press REC on the remote and then within about 1/2 second press Play or Pause.

The remote adapter box can be used with any universal remote programmed for the proper Sony VCR code. To select between them there are jumpers inside the unit. Remove the two screws on the bottom of the unit and remove the top cover. Located near the front window is a jumper block two jumpers. These jumpers configure what type of Sony VCR codes the unit will respond to. See the table below for a list of jumper settings.

JMP1	JMP2	Device Code	DirectTV	
JMP	JMP	Beta VCR	20033	*
JMP	OPEN	8mm VCR	20034	#
OPEN	JMP	VHS VCR	20032	
OPEN	OPEN	LDP	----	

* = Default setting # = Not supported on RC66 remote

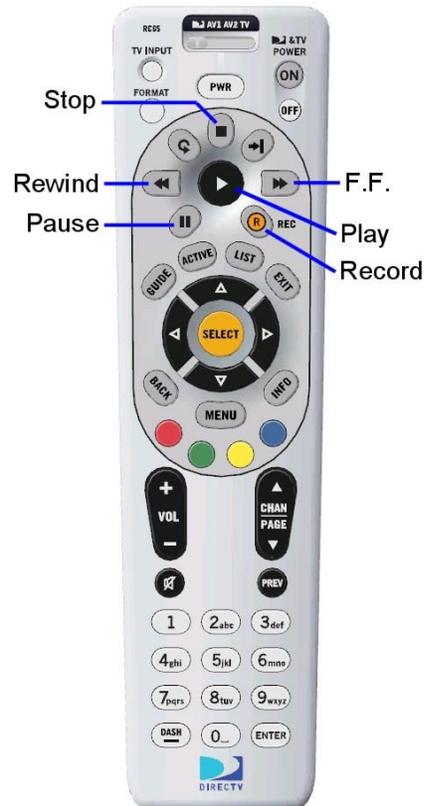

Configuring the DirecTV Remote: To program the DirecTV remote first slide the switch at the top to AV1 or AV2. Press and hold the MUTE and SELECT buttons until the green light at the top blinks twice then release. Using the number keypad enter the 5 digit device code from the table above. If done correctly the green light will blink twice after the last digit is entered. The full manual for the DirecTV remote can be found here:

www.teacremotes.com/directv.htm

Instructions for other brands of remotes can be found here www.teacremotes.com/Remotes/Remote_List.htm

www.R2R-Remotes.com