

Teac Remote Adapter Instructions

RC-401 Wireless Remote Adapter

Installation: Turn deck off. Remove the remote dummy plug from the back of the deck. Plug the remote adapter into the remote connector. Plug the AC adapter into the wall socket and then into the back of the remote adapter. The light on the front of the remote adapter should be on. Now power can be turned back on.

The remote adapter duplicates the function of the original Teac RC-401 wired remote. It can control 3 functions of the deck, Forward Play, Reverse Play and Stop.

The remote adapter can be used with any universal remote programmed for the proper Sony VCR code. To select between them there are jumpers inside the unit. Remove the two screws on the bottom of the unit and remove the top cover. Located near the front window is a jumper block with two jumpers. These jumpers configure what type of Sony VCR codes the unit will respond to. See the table below for a list of jumper settings and remote codes.

JMP1	JMP2	Device Code	DirecTV
JMP	JMP	Beta VCR	20033
JMP	OPEN	8mm VCR	20034
OPEN	JMP	VHS VCR	20032
OPEN	OPEN	LDP	----

* = Default jumper selection



Configuring the DirecTV Remote: To program the remote first slide the switch at the top to AV1 or AV2. Press and hold the MUTE and SELECT buttons until the green light at the top blinks twice then release. Using the number keypad enter the 5 digit device code from the table above. If done correctly the green light will blink twice after the last digit is entered. The full manual for the DirecTV remote can be found here:

www.revoxremotes.com/Remotes/DirecTV.htm

www.TEACREMOTES.com